


Refrigerator Vent Cover Instructions

(Camco #42160/42165)

This vent cover will fit Camco, Dometic and newer Norcold refrigerator vent bases.

1. If replacing a Dometic cover, select the four dimples marked "D." If replacing a Norcold cover, select the four dimples marked "N." To fit the cover on a Camco base, select either set of holes. Drill a 3/16" hole in each of the four dimples or drive the #10 x 2-3/4" screws directly through (the cover is thin at the dimples).

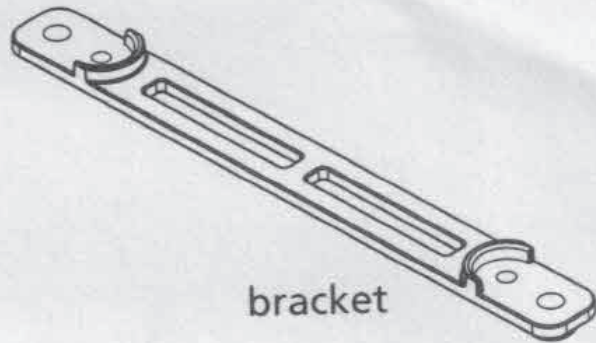

2. If you have a Norcold vent base or the hole centers are 4-1/4" apart across the narrow ends of Dometic vent base, discard the two brackets and skip Step 3.
3. If the hole centers are 5-5/16" apart across the narrow ends of Dometic vent base, attach the brackets provided using the 4 - #8 x 3/4" Phillips screws. Using the inner holes in the brackets as a guide, drill 1/8" pilot holes through the base.

4. Position the cover on the base, making sure the screws in the cover line up with the correct holes in the base, and that the streamlined nose of the cover faces the front of the vehicle. Start all screws, check for correct location, then tighten the four screws. Check that the cover is seated properly on the base.
DO NOT OVERTIGHTEN.

5. For complete weather protection apply a bead of silicone caulk around the screws.

SUGGESTION: If you find you are replacing an older Norcold cover and the mounting holes on the base do not line up with those on the Camco cover, it **may** be possible to drill two 1/8" pilot holes into the old Norcold base in order to fit the new cover.

Our return policy is limited to the replacement of original purchase. No other liability, responsibility or warranty is expressed or implied, including any regarding merchantability or suitability for a particular purpose.

Dometic is a trademark of the Dometic Corporation
Norcold is a trademark of Norcold, Inc. Corporation

Camco Manufacturing, Inc.
121 Landmark Drive / Greensboro, NC 27409
1-800-334-2004 / www.camco.net



895070 #0210